



THE GUITAMMER COMPANY

...leaders in low frequency sound...

Instructions for Setting up and Using the ButtKicker[®] Drum Throne Mounting Bracket

This kit contains everything you need to easily use a ButtKicker with most drum thrones **that have evenly-spaced, four-bolt seat attachment plates.**

Note: This bracket is NOT designed for thrones that have a three-bolt attachment plate. At this time we do not manufacture a mounting bracket for these types of thrones.

Before beginning, please verify that you have the following:

Package Contents:

- (x1) DTM mounting plate
- (x4) ¼" x 1" carriage bolts
- (x4) ¼"x 1 ¼" hex head bolts
- (x4) hex nuts
- (x4) lock washers

Additional Requirements (Not included):

- ButtKicker-brand transducer: ButtKicker LFE (BK-LFE or ButtKicker Concert (BK-CT)
- Power Amplifier
- Wrench
- 12 or 14 gauge speaker wire

Attach the Drum Throne Mounting Bracket to the Drum Throne:

1. Turn drum throne over and remove the existing four bolts which attach the pedestal plate to the bottom of the throne.
2. Set the drum throne mounting bracket on the bottom of the drum throne. Line up the four holes in the bottom of the drum throne with the four slots in the drum throne mounting bracket.
3. IMPORTANT - if any of the square mounting holes on the drum throne mounting bracket will be covered by the bottom of the drum when after it is reassembled, you MUST install the carriage bolts BEFORE bolting the drum throne mounting bracket to the bottom of the throne. The carriage bolts are installed with the head of the bolt towards the bottom of the seat.
4. Place pedestal mounting plate on top of drum throne mounting bracket and line up the four holes with ButtKicker mounting bracket slots and holes in bottom of seat.
5. Replace the throne's original four bolts, through both bracket and mounting plate, and tighten securely.

Note: If the throne's original bolts are not long enough then use the ¼" x 1 ¼" hex head bolts that came with the drum throne mounting bracket.

phone: 888.676.2828

fax: 815.346.9532

Post Office Box 82 / Westerville Ohio 43086 / info@guitammer.com



THE GUITAMMER COMPANY

...leaders in low frequency sound...

Attach the ButtKicker to the Drum Throne Mounting Bracket:

Note: The ButtKicker will line up with the square holes two different ways. Either way will work.

1. Line up the ButtKicker feet with four square mounting holes and push the four carriage bolts through the drum throne mounting bracket and the ButtKicker's feet. (If you have already placed carriage bolts into some or all of the mounting holes slide the ButtKicker's feet down over bolts.)
2. Place one star washer and one nut onto each carriage bolt and then tighten securely.
3. Insert speaker wire ends into ButtKicker terminals. Attach the other end to amplifier terminals.

Note: You may find it desirable to tie the speaker wire to bottom of the drum throne, or to the ButtKicker housing, with a large wire tie, or a strap. This will help prevent speaker cable from being pulled out of the speaker terminals as you move the throne around.

Also, if you are using a gas lift drum throne, sometimes the lever which controls the gas lift will rattle. This can usually be stopped by wedging a piece of rubber or a piece of cloth between the lever arm and the bottom of the seat.

Support:

Please DO NOT contact the store where you purchased this product for support.

Contact:

The Guitammer Company
1-888-676-2828, 8:30 am – 5:30 pm EST
Email us at: support@guitammer.com
Visit us online at: www.thebuttkicker.com

Warranty:

This Guitammer Company product is warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase by the original end-user. Items returned for repair under warranty will be repaired or replaced at the sole discretion of The Guitammer Company without charge for materials or labor, providing such items are returned for inspection, transportation prepaid, to The Guitammer Company or an authorized service center all repaired or replaced items will be returned freight collect. Warranties do not apply to products that have been subjected to abuse, accident, modifications, improper handling or installation, or repairs made by anyone other than The Guitammer Company or an authorized service center. The Guitammer Company shall be the final authority in the determination of all warranty service claims.

phone: 888.676.2828

fax: 815.346.9532